


SNOOPER S2 QUICK START GUIDE

SNOOPER

SNOOPER
SAFETY ALERT SYSTEMS

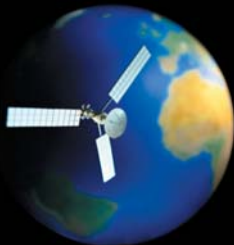

Registering your Snooper S2

The latest available Enigma database is pre-programmed into your Snooper S2 during production. However in order to access this information and unlock the unit for use you will need to register your S2 and select a payment option:

Payment Options:

Monthly by Direct Debit - and pay only £4.95 a month. Minimum subscription period 12 months.

One Credit Card payment – pay £49.95 for 12 months subscription.

Register On-line

Go to the official Snooper website <http://www.snooperneo.co.uk> and register on-line. Your unit should normally be activated and your unlock code supplied on completion of registration.

If you would like further information on registering your Snooper S2 please call 0870 787 0700 and select Option 1.

Please Note: To register your S2 you will need the serial number of your unit and you are required to select a payment method at the time of registration.

For further registration options please refer to the user manual which can be found on the S2 Download Software CD-ROM.

Unlocking your Snooper S2

STEP 1

First provide power to your Snooper S2 by using the coiled cigarette lighter lead or USB to PC lead provided with your unit.



Step 2

Ensure your S2 is switched OFF (no LED's are lit). Whilst holding down the MUTE/DIM button, switch ON your S2 using the rotary OFF/ON/VOLUME switch, located on the right hand side of the unit. When the Red and Blue LED's are lit, release the MUTE/DIM button.



Step 3

Your unit will now be in the 'UNLOCK' mode (All LED's are lit). Each digit of the code must be entered separately. Assuming the unlock code is 4 & 10 (each unlock code is unique to each unit). The first digit (4) is entered by pressing the MEM/DEL button 4 times.



STEP 4

Now press the MUTE/DIM button once to confirm the entry of the first number – the S2 will beep twice.



Step 5

Enter the second digit (10) by pressing the MEM/DEL button 10 times then finally press the MUTE/DIM button once. The S2 will beep three times followed by 4 beeps, which increase in pitch, to confirm the code has been entered.



Your S2 should now be unlocked. This can be confirmed by the centre LED flashing red, indicating that the unit is searching for satellites.

Note: If the unit is still locked, the outer red LED's will flash. If this is the case the process must be started again to unlock the unit.



Snooper S2 Quick Start Guide

1. GPS Indicator

Flashing Red - Establishing satellite connection
Green - GPS established.

2. Red LED's

- a) If the Red LED's flash every three seconds this indicates that the unit is still locked.
- b) If the Red LED's flash when approaching a fixed safety camera this indicates that you are travelling ABOVE the posted speed limit for that camera location.

3. Blue LED's

If the Blue LED's flash when approaching a fixed safety camera this indicates that you are travelling BELOW the posted speed limit for that camera location.

4. MEM/DEL

This button is used for storing or deleting user coordinates.

5. MUTE/DIM

If when approaching a fixed safety camera you wish to stop the audible alert but still receive a visual alert press this button.
If you want to reduce the brightness of the LED's press this button when you are not receiving an alert on the unit. To restore the brightness press the button again.



For more detailed information of how the unit works please refer to the user manual that is situated on the S2 Download Software CD-ROM