



DVR-WF1

# Contents

## 1 Product Overview

1.1	Box Contents	3
1.2	Product Overview	3
1.3	Drive Recorder Installation	3
1.4	Buttons and Button functions	4
1.5	Product Specifications	4
1.6	Memory Card	4

## 2 Mobile App

2.1	App installation	5
2.2	App Menu Settings	6
2.2	App Menu Settings (contd.)	7

## 3 Support

3.1	Frequently Asked Questions	8
3.1	Frequently Asked Questions (contd.)	9

## 4 Warranty

4.1	Limited warranty	10
-----	------------------	----

# 1. Product overview

## 1.1 Box Contents


ITEM	CONTENTS	
1	Drive Recorder	
2	GPS unit	
3	Car adaptor	
4	User manual	
5	8GB MicroSD card	

## 1.2 Product Overview

ITEM	FUNCTION	
A	GPS unit connection socket	
B	USB Mini Type-B connection socket	
C	Microphone	
D	Pinhole reset button	
E	Lens	
F	LED status indicator	
G	Memory card slot	
H	Power button	
I	Speaker	

## 1.3 Drive Recorder Installation

- 1 Select an appropriate mounting position on the windscreen, one which does not impair the driver's view of the road ahead.

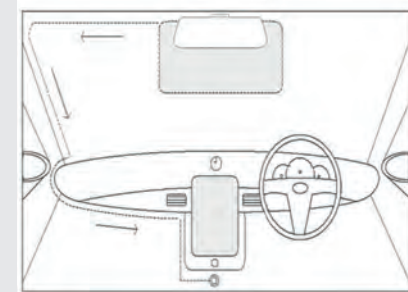

- 2 Clean the glass and fix the camera and GPS unit to the windscreen using the double-sided tape provided.
- 3 Connect the cable from the GPS unit into the camera and connect the power cable.
- 4 Route the power cable around the perimeter of the windscreen and insert the car adaptor into the car accessory socket.
- 5 Insert a memory card into the MicroSD card slot on the DVR-WF1.
- 6 Disconnecting the Drive Recorder: The recorder will automatically turn itself off when it is disconnected from the power supply with no damage to the unit.

DVR-WF1 v1.0 11/17

# 1. Product overview

## 1.4 Buttons and Button functions

BUTTON	OPERATIONAL STATUS	CONVENTIONAL FUNCTIONS
POWER (H)	Power on	3 second press to <b>Power on</b> The unit will automatically power on if the DVR-WF1 is plugged into the power socket when the car is switched on.
	Power off	3 second press to <b>Power off</b> The unit will automatically power off if the DVR-WF1 is plugged into the power socket when the car is switched off.

## 1.5 Product Specifications

<b>CAMERA LENS:</b>	High resolution, F2.0 wide angle fish eye lens
<b>RESOLUTION/FPS:</b>	FHD 1080P @ 30FPS HD 720P @ 60FPS
<b>BATTERY:</b>	Built-in polymer Li-ion Battery
<b>MICROPHONE/SPEAKER:</b>	Integral
<b>STORAGE:</b>	MAX: 64GB microSD Class 10 or higher
<b>IMAGE TECHNOLOGY:</b>	H.264 image compression MOV format WDR
<b>SECURITY APPLICATION:</b>	G-sensor Motion Detection Parking Monitoring System

## 1.6 Memory card

We recommend using a branded MicroSD card for the best performance. The maximum size MicroSD card is 64GB (class 10). The card should be formatted to FAT32 before being used. Recordings will be lost and damaged if a defective MicroSD card is used. A 64GB memory card will save approximately 660 minutes recording at full high-definition graphics quality.

To remove the memory card, lightly press the bottom of the memory card so that it pops up, then using your fingertips remove the card from the slot.

To access the stored video files and images on the MicroSD card, plug the DVR-WF1 into a PC using a standard USB data transfer cable with a USB Mini Type-B to Type-A connector. [DVR-WF1 v1.0 11/17](#)



## 2. Mobile app

### 2.1 App Installation

To use this device you will need a Smart Phone. To Install our app, use a QR Code reader app on the QR Code below, this will take you to the relevant app store page for your Smart Phone.



You can also search for **Snooper DVR-WF1 Player** in the app stores if you don't have a QR Code scanner installed.

Once you have installed the app follow these instructions.

1. Turn on the DVR-WF1

#### iOS Setup

2. Open **Settings**
3. Open **Wi-Fi**
4. In your list of Wi-Fi networks touch **R502xxxxxxxxxxxxxx**
5. Enter the password: **12345678**
6. Once the Wi-Fi has successfully connected, close **Settings**
7. Open the **Snooper DVR-WF1 Player** app

#### Android Setup

2. Open **Settings**
3. Open **Wi-Fi**
4. In your list of Wi-Fi networks touch **R502xxxxxxxxxxxxxx**
5. Enter the password: **12345678**
6. Once the Wi-Fi has successfully connected, close **Settings**
7. Open the **Snooper DVR-WF1 Player** app

## 2.2 App Menu Settings

MENU ITEM	DESCRIPTION	AVAILABLE OPTIONS
<b>CAMERA</b>		
<b>NAME:</b>	Name of the DVR that will show up on your device lists. You can rename the device to something more memorable.	Text entry
<b>CAMERA SETTINGS</b>		
<b>VIDEO FILE LENGTH:</b>	Sets the duration of recording.	Off/3MIN/5MIN/10MIN
<b>VIDEO RESOLUTION:</b>	Sets the quality of the video.	1080FHD/720P/WVGA/VGA
<b>PARKING MODE:</b>	The device will automatically power on and start recording when the device detects a collision.	Off/On
<b>SOUND RECORD:</b>	Selects the recording of audio onto the video files.	Off/On
<b>DISPLAY DATE TIME:</b>	If the date stamp is enabled, recording files or photos will be overlaid with the date and time of recording.	Off/On
<b>G-SENSOR LEVEL:</b>	Sensitivity setting for when motion detection functions are activated.	OFF/LOW/MED/HIGH

## 2.2 App Menu Settings (contd.)

MENU ITEM	DESCRIPTION	AVAILABLE OPTIONS
<b>MICROSD CARD</b>		
<b>STATUS:</b>	Confirms that the MicroSD card is inserted correctly in the device.	No options
<b>RESIDUAL SPACE:</b>	Shows how much space is on the MicroSD card	No options
<b>FORMAT SD CARD:</b>	Formats the memory card (All the data stored on the MicroSD card will be deleted).	Cancel/OK
<b>SYSTEM</b>		
<b>FW VERSION:</b>	Indicates the current firmware version.	No options
<b>APP VERSION:</b>	Indicates the current installed app version.	No options

# 3. Support

## 3.1 Frequently Asked Questions

**Q: Which MicroSD card should I use?**

**A:** We recommend using a branded MicroSD card for the best performance. The maximum size MicroSD card is 64GB (class 10). The card should be formatted to FAT32 before being used. Recordings will be lost and damaged if a defective MicroSD card is used. A 64GB memory card will save approximately 660 minutes recording at full high-definition graphics quality.

**Q: How long can the DVR work on a single charge? (DO WE KNOW THIS?)**

**A:** The built-in 420mAh polymer battery can provide up to 15-minutes recording without power. External power packs can be used to power the device whilst parked, recording time would depend on the capacity of the power pack.

**Q: How do I use the Parking Mode?**

**A:** When the G-sensor of the car DVR detects there has been a collision, it will automatically record for 15 seconds and save the footage as an emergency recording. The power of the machine at this time will be provided by its built-in battery.

**Q: Can the power supply cable be changed?**

**A:** Use of a cable other than the one supplied may damage the unit and invalidate your warranty.

**Q: What happens when the MicroSD card is full? (DOES THIS UNIT DO THIS?)**

**A:** The device uses, a function called 'cyclical recording', which means when the MicroSD card is full, the earliest recording will be replaced by the latest one. This does not include 'emergency recordings, if the MicroSD card is filled with emergency recordings they will need to be deleted manually. It is recommended the card be formatted when the card is full, be aware that all data will be on the card will be lost, including emergency recordings.

**Q: What happens when the MicroSD card is removed?**

**A:** If you remove the MicroSD card while the device is recording, the DVR will turn off automatically and the recording will be lost or may be damaged.



## 3. Support

### 3.1 Frequently Asked Questions (contd.)

**Q:** Do I need to manually start recording?

**A:** No. Recording starts automatically when the device detects power from the car accessory socket, it will continue recording whilst the car is running and will auto power off after the car is switched off.

## 4. Warranty information

### 4.1 Limited warranty

---

This Snooper product is warranted against all defects in materials and workmanship for a period of one (1) year from the date of original purchase, when purchased from an authorized Snooper dealer.

ALL PURCHASES OF SNOOPER PRODUCTS FROM NON-AUTHORIZED SNOOPER DEALERS ARE SUBJECT TO FURTHER WARRANTY RESTRICTIONS AS DESCRIBED BELOW.

The conditions of this Limited Warranty and the extent of responsibility of Performance Products Ltd (PPL) under this Limited Warranty are as follows:

1. This Limited Warranty will become void if service is performed by anyone other than an approved Snooper Warranty Service Centre that results in damage to the product.
2. This Limited Warranty does not apply to any product which has been subject to misuse, neglect or accident, or which has had the serial number altered, defaced or removed, or which has been connected, installed, adjusted or repaired, other than in accordance with the instructions provided by Snooper.
3. Should you have any difficulties with the performance of this product during the warranty period, please call Snooper or visit our web site <http://www.snooperneo.co.uk>. You may also contact Snooper Customer Services at the address listed below for any service help you may need with Snooper products.
4. PROOF OF DATE OF PURCHASE FROM AN AUTHORIZED SNOOPER DEALER WILL BE REQUIRED FOR ANY WARRANTY SERVICE OF THIS PRODUCT.
5. SNOOPER PRODUCTS PURCHASED FROM A SOURCE OTHER THAN AN AUTHORIZED SNOOPER DEALER, INCLUDING ANY AND ALL PURCHASES VIA THE INTERNET FROM A NON INTERNET AUTHORIZED SNOOPER DEALER, SHALL NOT BE COVERED BY ANY SNOOPER LIMITED WARRANTY TO THE EXTENT ALLOWED BY APPLICABLE LAW.
6. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM EU COUNTRY TO EU COUNTRY.
7. ALL IMPLIED WARRANTIES, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, SHALL HAVE NO GREATER DURATION THAN THE WARRANTY PERIOD SET FORTH ABOVE. UNDER NO CIRCUMSTANCES SHALL SNOOPER BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT. BECAUSE SOME EU COUNTRIES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.
8. Product must be shipped in its original carton or equivalent carton, fully insured, with shipping charges prepaid. Snooper will not assume any responsibility for any loss or damage incurred in shipping.
9. The sole responsibility of Snooper under this Limited Warranty shall be limited to the repair of the product or the replacement of the product only (whichever is deemed appropriate and at the sole discretion of Snooper).
10. This Limited Warranty does not cover car static or other electrical interferences, labour costs or any other associated or incidental costs incurred for the removal or re-installation of the unit for repair.

DVR-WF1 v1.0 11/17